

| Ref No | Part No | Description | Ref No | Part No | Description |
|--------|---------|-------------------------|--------|---------|-----------------------|
| 1 | 501885 | T.H.S.C.S. 1/4-20 x 1/2 | 45 | 501092 | Dust Cover |
| 2 | 501896 | Flat Washer | 46 | 501972 | Bolt |
| 3 | 501899 | Deflector | 47 | 501091 | Air Plug |
| 4 | 501901 | Bolt | 48 | 501939 | Belt Hook |
| 5 | 501902 | Cap | 49 | 501938 | Hex S.H.C.S. |
| 6 | 501903 | Seal | 50 | 501998 | Spring Pin |
| 7 | 501904 | Spring, Main Valve | 51 | 501931 | Spring Pin |
| *8 | 501905 | O-Ring | 52 | 501089 | Urethane Retainer |
| 9 | 501906 | Head Valve Piston | 53 | 501963 | Steel Channel |
| 10 | 501907 | O-Ring | 54 | 501966 | Safety B |
| 11 | 501908 | Collar | 55 | 501967 | Safety Spring |
| 12 | 501909 | Packing | 56 | 501968 | E-Ring |
| 13 | 501910 | Piston Ring | 57 | 501969 | Adjust Shaft |
| 14 | 501911 | O-Ring | 58 | 501387 | Spring |
| 15 | 501912 | Driver Blade | 59 | 501970 | Safety A |
| 16 | 501920 | Cylinder Press Ring | 60 | 501971 | No Mar Tip |
| 17 | 501913 | O-Ring | 61 | 501951 | Latch Cover |
| 18 | 501914 | Cylinder | 62 | 501950 | Spiral Pin |
| 19 | 501915 | Cylinder Ring | 63 | 501949 | Front Latch Handle |
| 20 | 501916 | Cylinder Spacer | 64 | 501948 | Front Latch |
| 21 | 501917 | O-Ring | 65 | 501947 | Driver Guide Cover |
| 22 | 501918 | Bumper | 66 | 501946 | Spiral Pin |
| 23 | 501919 | Driver Guide | 67 | 501940 | Hex Soc.Hd.Bolt |
| 24 | 501921 | O-Ring | 68 | 501941 | Driver Guide Cover B |
| 25 | 501922 | O-Ring | 69 | 501942 | Driver Guide |
| 26 | 501923 | Plunger Cap | 70 | 501943 | Stopper Finger Spring |
| 27 | 501930 | Spring Pin | 71 | 501944 | Stopper |
| 28 | 501924 | Valve Plunger | 72 | 501945 | Fixed Pin |
| 29 | 501925 | O-Ring | 73 | 501953 | Pusher Spring |
| 30 | 501926 | O-Ring | 74 | 501954 | Pusher |
| 31 | 501927 | Spring | 75 | 501955 | Spring Pin |
| 32 | 501928 | Plunger | 76 | 501952 | Anchor Block |
| 33 | 500999 | O-Ring | 77 | 501956 | Negator Spring |
| 34 | 501929 | Trigger Valve Head | 78 | 501960 | Magazine Steel Cover |
| 35 | 501932 | Spring | 79 | 501961 | Counter Sunk Screw |
| 36 | 501933 | Trigger Unit | 80 | 501959 | Screw |
| 37 | 501965 | Tap Bolt | 81 | 501958 | Protecting Hood Cover |
| 38 | 501962 | Lock Nut | 82 | 501962 | Lock Nut |
| 39 | 501964 | Magazine B | 83 | 501957 | Magazine A |
| 40 | 501961 | Counter Sunk Screw | 84 | 501973 | Nameplate |
| 41 | 501934 | Trigger Pivot Pin | 85 | 501302 | Warning Label |
| 42 | 501935 | Housing | 86 | 501140 | Housing Label-left |
| 43 | 501936 | O-Ring | 87 | 501141 | Housing Label-right |
| 44 | 501937 | End Cap | 88 | 501995 | Tap Bolt |

